

Technical information


Positions and connections for 3-way switches

Function 4

MINIATURE SWITCHES


5000 and 7000 series are available with CT or TH connections.
Desired connections are to be specified in enlarged box of model structure.
12000 and S series are available with TH connections only.

Model structure 5000 and 7000 series

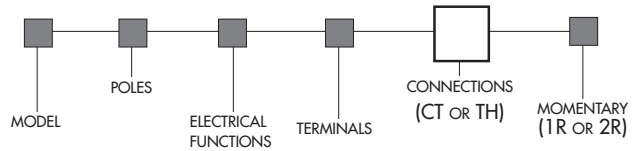


FUNCTION 4 - TYPE TH (preferred) - 5000 - 7000 - 12000 - S - SR series

→ Keyway

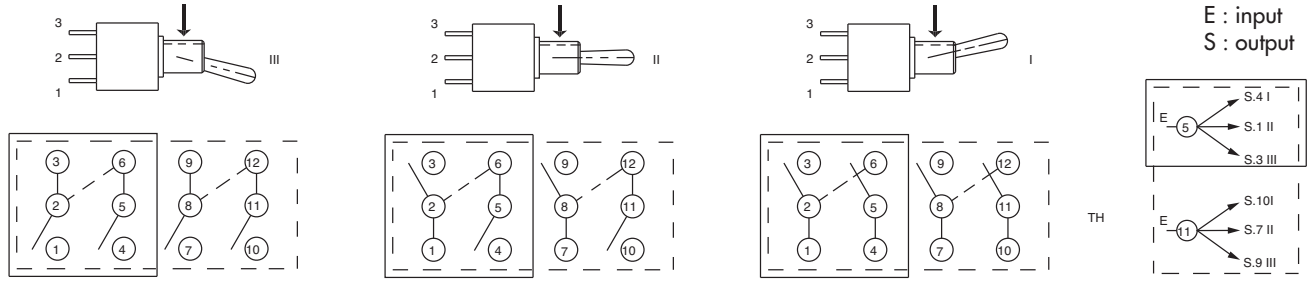

FUNCTION 4 - TYPE CT (reversed) - 5000 - 7000 series

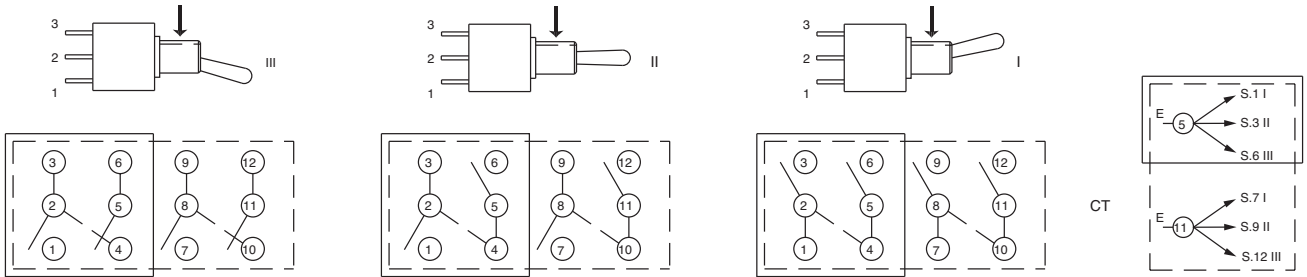

Single pole switches in a double pole case □ SP
Double pole switches in a four pole case ▭ DP



Dotted line between poles : jumper to be wired by the user.

INDUSTRIAL SWITCHES : 600 600H - 3600NF - 6000 AND 2600 SERIES

FUNCTION 4			FUNCTION 4-1R (momentary one side)			FUNCTION 4-2R (momentary both sides)		
ON 5-6 2-3	ON 5-6 2-1	ON 5-4 2-1	MOM 5-6 2-3 ▲	ON 5-6 2-1	ON 5-4 2-1	MOM 5-6 2-3 ▲	ON 5-6 2-1	MOM 5-4 ▲ 2-1
4 5 6 1 2 3	4 5 6 1 2 3	4 5 6 1 2 3	4 5 6 1 2 3	4 5 6 1 2 3	4 5 6 1 2 3	4 5 6 1 2 3	4 5 6 1 2 3	4 5 6 1 2 3
• Common	◦ Maintained	▲ Momentary	ON			ON		
Terminals 2 and 6 must be connected by the user for a 3 way switch. Single pole switches in a double pole case.								
			5 3 1 4			5 3 1 4		